

SnapPad by Origen RV Accessories LTD.

Congratulations on taking the first step in ending the jack pad shuffle!

Enclosed you'll find your new, environmentally friendly, highly durable, patent pending SnapPads - Jack pads designed to go on in a snap and stay on for life.

Installation Instructions

Installation time: 3 - 6 minutes per pad.

Video instructions can be found on our website www.rvsnappad.com or YouTube.

Search RV SnapPad and click on 'Installation' or 'Uneven Ground Installation.'

Important Notes


1. Snap Pad installation is best performed on a level or near level surface --- preferably a hard surface (concrete or asphalt). Wheel chocks can be placed in front of and behind the RV wheels for additional safety.
2. *****SnapPads MUST FIRST BE INSTALLED ON THE FRONT JACKS (landing gear) before continuing to the rear 2 or 4 leveling jacks. Front jack installation must be done while the RV is hitched up to the truck. For safety, also connect the RV's break-away cable to the truck before installation.*****
3. As front jacks generally extend one-at-a-time, it is recommended that SnapPad be installed on the landing jack pad that will touch the ground first.
4. In most systems, once the first landing jack pad develops enough pressure against the SnapPad, the other landing jack will extend. Keep a watchful eye on the second landing jack pad as it extends. Stop extending it when the pad is about 3 to 4 inches from the ground. *****KEEP YOUR FINGERS AND ANY FOREIGN OBJECTS CLEAR WHEN LOWERING THE JACK INTO PLACE.*****
5. Carefully place and center the second SnapPad under the landing jack pad. Begin to extend the front landing jacks until the second pad touches the SnapPad. If you feel that either landing pad is not centered on the SnapPads, retract the landing gear enough to re-center the SnapPads and proceed with extending the landing gear to complete the SnapPad installation.
6. *****Once SnapPad installation is complete on the front landing jacks, the TRUCK MUST BE DISCONNECTED AND PULLED AWAYED from the RV before installing SnapPads on the rear 2 or 4 leveling jack pads.*****
7. Repeat installation process, in sequence, on the rear 2 or 4 jack pads.

Special Notes & Recommendations

- If your SnapPad will not fully connect you may be on uneven ground. Retract your jack 3 to 4 inches, place a shim under the side which hasn't snapped on and then extend the jack until that side snaps on. Retract your jack in order to safely remove the shim. Visually confirm the Pad is connected on the complete diameter. You're in business!
- SnapPads are designed specifically for 9" round jack feet, commonly found on fifth wheel trailers and larger RV's.
- Grab a helper! It's faster and more efficient with 2 people.
- You can expedite the process with a lubricant. We suggest using a spray bottle with soapy water. It's best to use something that will evaporate over time.
- Install each SnapPad individually and visually confirm the reinforced lip has engaged on the complete diameter. It is critical your SnapPad has been installed fully and correctly.

Info & Testing Statistics

- Dimensions 11" Wide x 11" Long x 1.83" Thick
- 4.8 Lbs. per Pad
- You're helping our environment! SnapPads are made from recycled tires. That means SnapPads are extremely durable and versatile too.
- Will work on any type of surface, level or uneven, including: Asphalt--- Concrete--- Grass--- Gravel--- Mud--- Resin--- Ice--- Snow
- Scientifically tested to maintain integrity at over 120° F down to -40° F.
- It takes 1,300 lbs. of vertical pressure to install your SnapPads. This ensures no matter how far off the beaten path you venture, your SnapPads will be there with you.
- Proudly made in the U.S.A
- For more information and help with installation visit our website www.rvsnappad.com

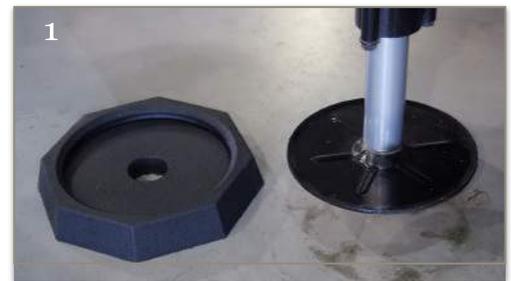

Warranty

Congratulations on your purchase of the first and only permanent jack pads!

What is covered and for how long?

Origen RV Accessories LTD offers a 2 year extended warranty on both performance and defects in material and workmanship. Should your product fail within a 2 year time frame, Origen RV Accessories LTD will replace your pad free of charge.

Conditions

- Origen RV Accessories LTD will replace any defective products within the acceptable 2 year window, starting from the purchase date.
- Provide a written statement of product defect.
- Product must be shipped back to Origen RV Accessories LTD manufacturing facility at owners cost, meaning **you pay the shipping charges**. See address below.

Attn: Warranty Department --- 605 Laurel St, Mishawaka, IN, USA 46544

- Confirmation that defect is not from repeated installation or misuse in any way.
- Proof of purchase is required.

Disclaimers

- SnapPads are designed to be installed once. Do not remove and re-install as this will void your warranty.
- Use extreme caution when installing and using SnapPad. Origen RV Accessories LTD is not responsible or liable in any way for any indirect or direct injury sustained during installation or future use of the product.
- Origen RV Accessories LTD shall not be liable for any special, incidental, indirect or consequential damages whatsoever (including but not limited to, labor or installation charges, damages to associated equipment, RV, trailer or towing vehicle) arising from the use or inability to use or install the product.

Have questions? Need help with installation?

Visit our website or contact us at:



www.rvsnappad.com



1-855-SNAP-PAD (1-855-762-7723)



info@rvsnappad.com



Search 'RV SnapPad Installation' on google or YouTube.